1. If the plant shows "*Offline*" tap "*Devices*" at the bottom of the screen.

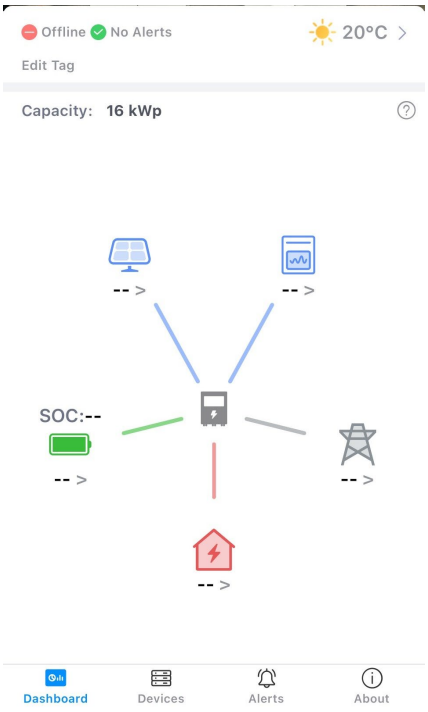

2. Tap "*Add Datalogger*."

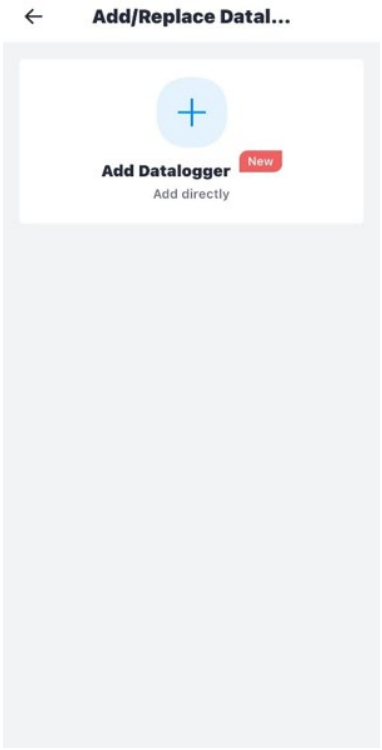

3. Scan the logger's QR code, or enter the Serial Number (SN) manually, then tap "*Confirm*."

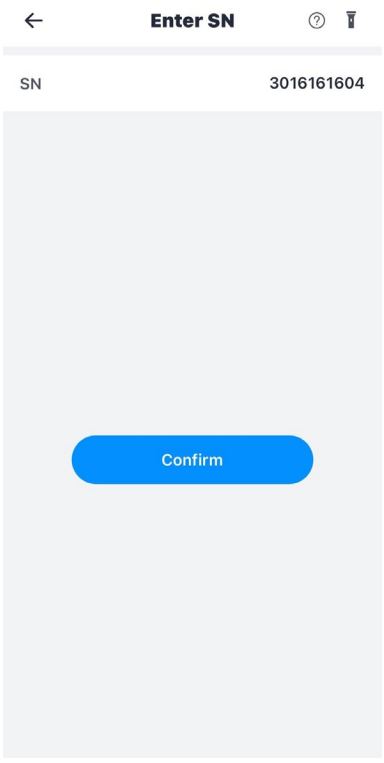

4. Review the logger status, tap "*Confirm*" to continue. Tap "*Confirm*" again to finish installation.

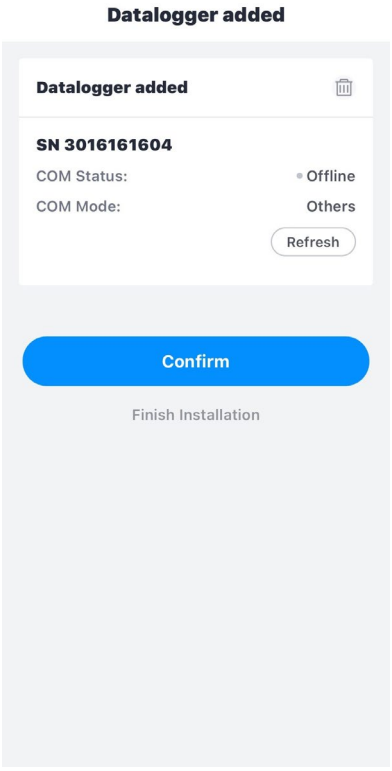

5. Tap "*Completed*." The app confirms the logger and its connected sub-device(s).

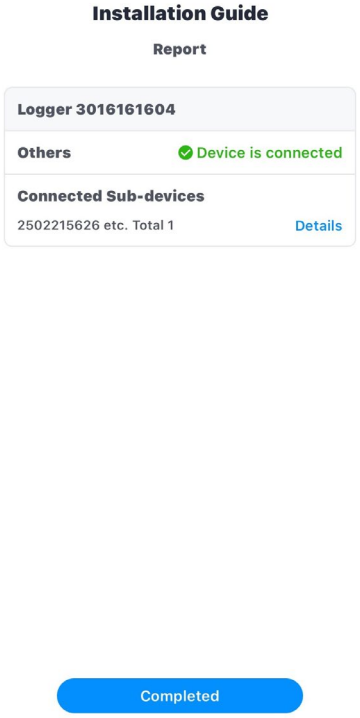

6. Wait 3–5 minutes for the connection. Plant shows "*Online*" at the top of the screen.

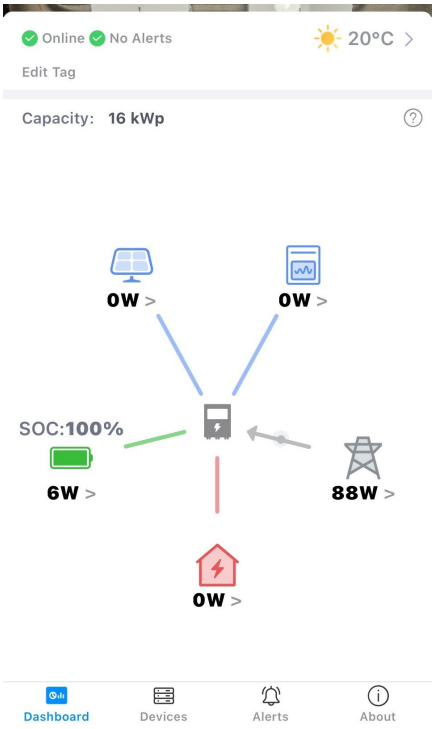

7. Under Devices, tap the Logger to expand it and verify the ICCID/ESN and carrier name (e.g. T-Mobile) are populated.

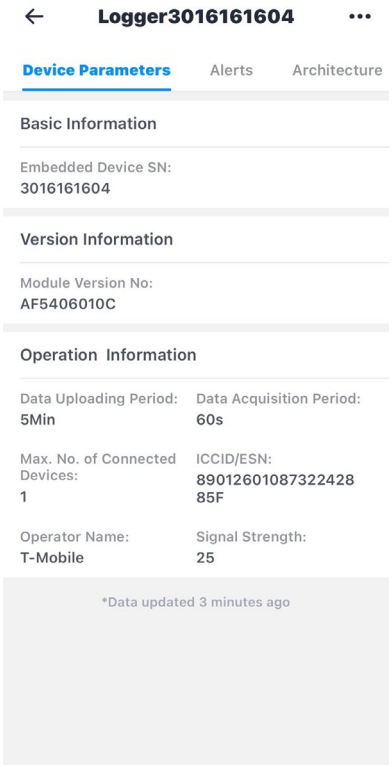

8. Done — the plant list should now show the plant as *Online* with power/energy data reporting normally.

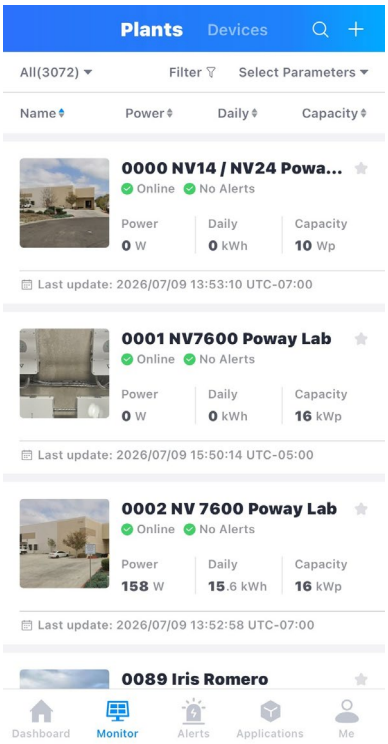

Questions? Contact NeoVolta After-Sales Support